 
 


## Label Gun Instructions

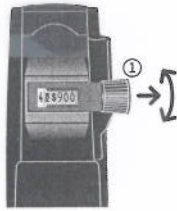

 
### Setting the Price Code:

Pull the adjustment knob (1) out to the desired position and turn the knob to select the desired number. The 14th position on the print band is always neutral. Important: the adjustment knob must be pushed back in place before operating so that the labeler prints and to avoid damage to the print head.

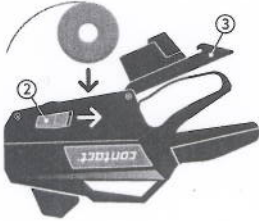


### Insertion of Label Roll:

Slide both side caps (2) simultaneously in the direction of the arrow to open the bottom (3). Insert a new label roll as shown on the drawing.

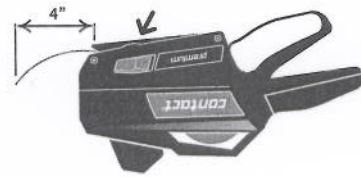

 Pull out a strip of labels approximately 4 inches long and close the bottom until it snaps into place.

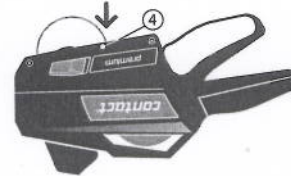

Bend the strip back and feed it through the slot between the white guide pulley (4) and the transport wheel. By operating the grip several times, the label strip is transported inward and tightened. The labeler is now ready for use.




### Opening the Ink Roller Carriage:

 Using your thumb or index finger, simply pull the top of the Ink Roller Carriage panel (5) away from the label gun frame until it clicks open. The carriage panel will rotate downward, allowing you to access the Ink Roller.



### Replacing the Ink Roller:

Squeeze the ink roller cartridge (6) between thumb and index finger at end. Pull the ink roller cartridge outward and it will unlock from the cross runner of the ink carriage housing. To insert a new ink roller cartridge, remove a new roller from the blister package, squeeze each end and with a slight pivoting movement from top to bottom, snap the carriage back into the cross runner of the housing. The contact labeler is ready for operation again.

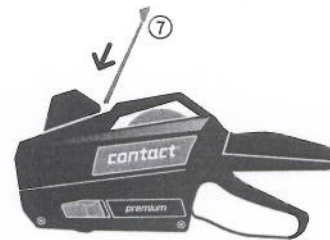

### Inserting the Message Slug:

Holding the slug between your thumb and index finger, slide it downward into the cavity directly behind the price adjustment mechanism until it clicks into place. Simply reverse this process to remove the slug.